

PLAN VIEW

NOTE: REFER TO TREMCO'S PUBLISHED APPLICATION INSTRUCTIONS FOR ACCEPTABLE JOINT SIDE WALL SUBSTRATE CONDITIONS PRIOR TO INSTALLATION

TO PERFORM FIELD MITER:

1. IF FOR A HORIZONTAL TO VERTICAL TRANSITION:  
-CUT A 60 DEGREE NOTCH OUT FROM THE SILICONE SIDE DOWN, LEAVING  $\frac{1}{4}$ " MATERIAL ON THE BOTTOM.

IF FOR A VERTICAL TO HORIZONTAL TRANSITION:  
-CUT A 60 DEGREE NOTCH FROM THE UNDERSIDE, TO THE BASE OF THE SILICONE RIBS.

2. APPLY SUPPLIED SPLICE ADHESIVE TO BOTH SIDES OF ANGLE CUTS.
3. PRESS TOGETHER AND INSTALL INTO JOINT.
4. IF CUT FROM THE SILICONE SIDE, TOUCH UP SILICONE BELLOWS USING THE SUPPLIED SILICONE.
5. RESUME INSTALLATION INSTRUCTIONS AS NORMAL.

VULKEM EWS SYSTEM\* ON STAIR TREADS AND RISERS

RECESS OUTSIDE MITER  $\frac{1}{2}$ " BELOW SUBSTRATE SURFACE, TYP.

INSIDE MITER TO BE FLUSH WITH SUBSTRATE SURFACE, TYP.


PERFORM FIELD HORIZONTAL TRANSITION

TOUCH UP SILICONE BELLOWS WITH SUPPLIED SEALANT, TYP.

EXISTING RISER

PERFORM FIELD VERTICAL TRANSITION

EXISTING TREAD

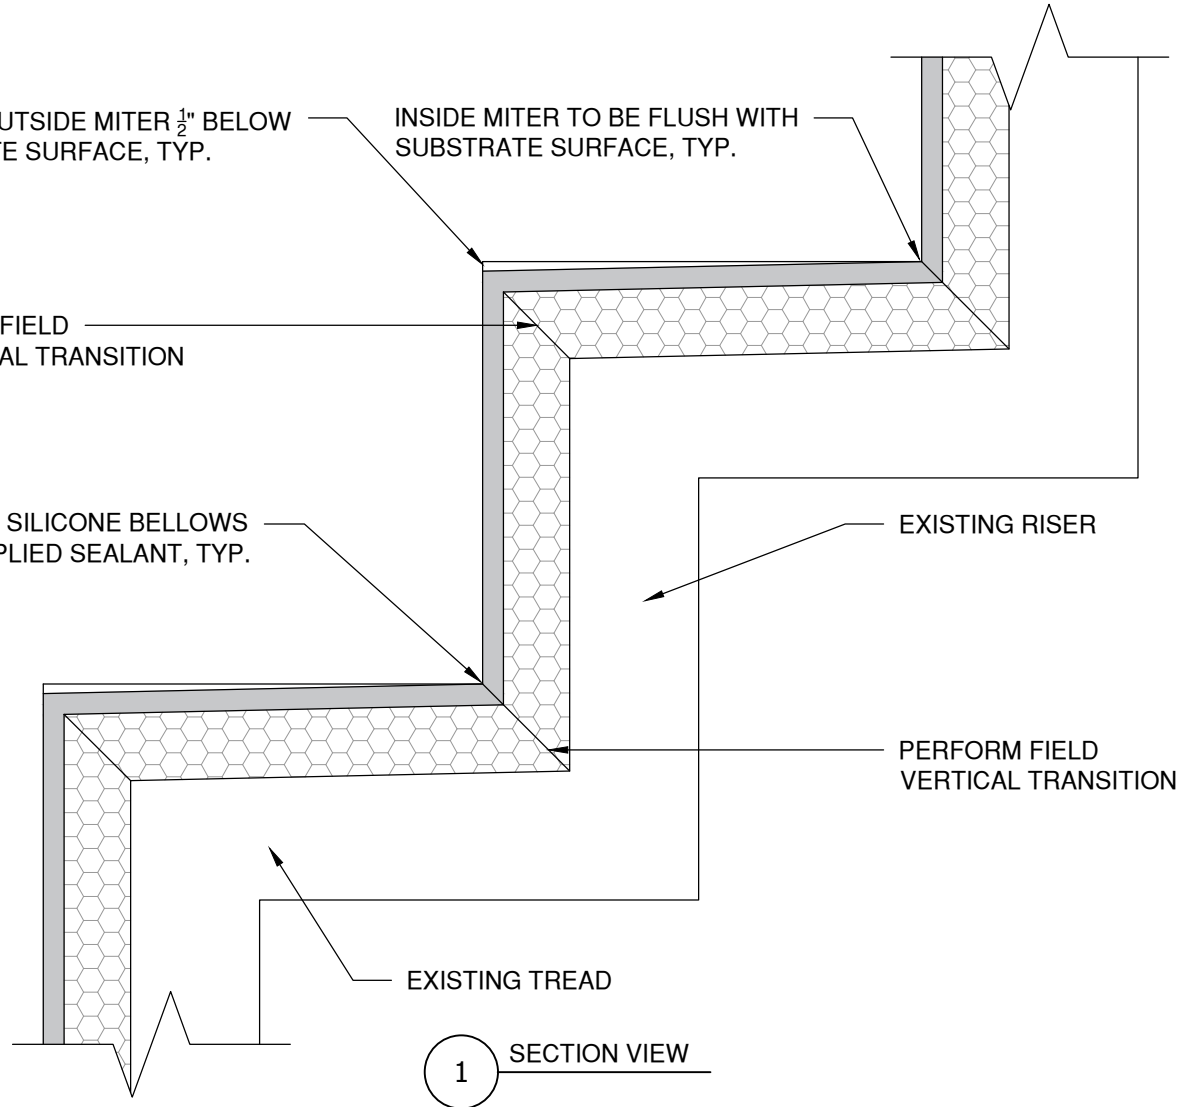

SECTION VIEW

*The architecture, engineering, and design of the project using the Tremco and Willseal products are the responsibility of the project's design professional. All products and systems must comply with local building codes and standards. This detail is for general information and guidance only and Tremco and Willseal specifically disclaims any liability for the use of this detail. The project design professional determines, in its sole discretion, whether this detail or a functionally equivalent detail is best suited for the project. This detail is subject to change without notice. Contact Willseal or Tremco to ensure you have the most recent version.*

**Willseal 250**



Detail: Willseal 250 with Vulkem EWS System at Stair Application

File Name:

W250-S-EWS-01



Drawn by: HDE

Checked by: AM/EL

Scale: NTS

Date: 2/11/2022

Construction Products Group

Willseal Technical Support: 800-274-2813

[www.tremcocpg.com](http://www.tremcocpg.com)